


3 Fixing of main wheels, nose wheel and other parts.







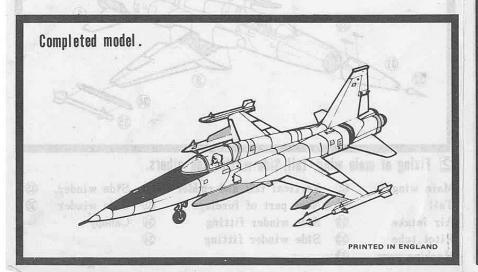



PART DRAWINGS AND PART NUMBERS (Before Assembling Your Kit)

Read these instructions carefully before assembling your model and check the exact fit of the parts before cementing. Clean off excess plastic, if any, with a sharp knife or a file. Since many tiny parts are included, check them with the assembly drawing before assembling. Do not tear off parts from the stem, but cut them off carefully with nippers or tinsnips. Do not cut off all of the parts at the beginning, but cut each part to be assembled one by one to assure each part being properly identifed. Do not use too much adhesive because surplus adhesive will spoil the appearance.

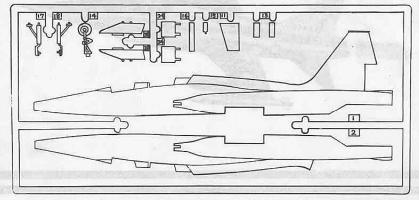

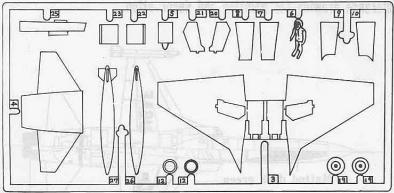


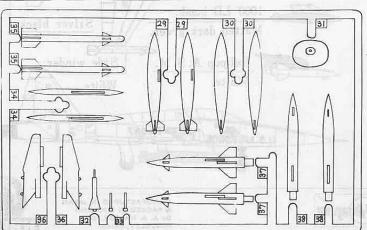

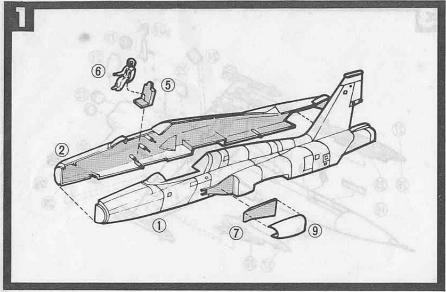

1 Assembling of fuselage, cockpit, pilot and air intake.

Fuselage (left)	1	Separator (left)	(7)
Fuselage (right)	2	Separator (right)	8
Cockpit	(5)	Air intake (left)	9
Pilot	6	Air intake (right)	10

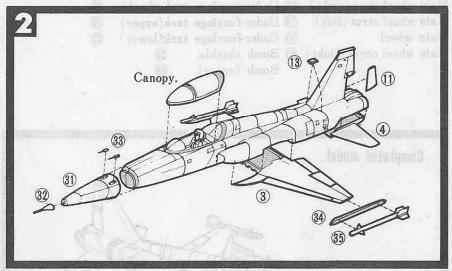

2 Fixing of main wing, tail. Side winder and others

Z rixing or m	ain wi	ng, tali, Side winder and oth	ers.		
Main wing	3	Vertical tail and rudder	11)	Side winder	35
Tail	4	Nose part of fuselage	31)	Side winder	35
Air intake	13	Side winder fitting	34)	Canopy	
Pitot tube	32	Side winder fitting	34)		
Machine mine	(33)				