


# RM106 00 Scale Small (Teeny Tiny) Cottage INSTRUCTIONS


## PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE YOU START

Start by extracting all the components from the printed and grey unprinted sheet. Each component is fastened to the sheet by means of score lines cut partway through the card. Carefully cut the scores with a knife to detach from base card.

## 1 Windows & Doors.

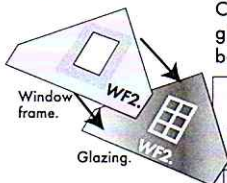


Cut out the eight pieces of clear glazing and fit each one to the back of matching window frames.

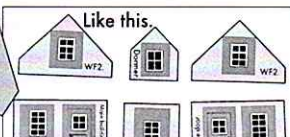

Then fix the grey spacers **G3, G4, G5 & G6** on top of the matching windows and door.



**DON'T FIX ANYTHING TO THE FRONT OF THE MAIN BUILDING DOOR.**

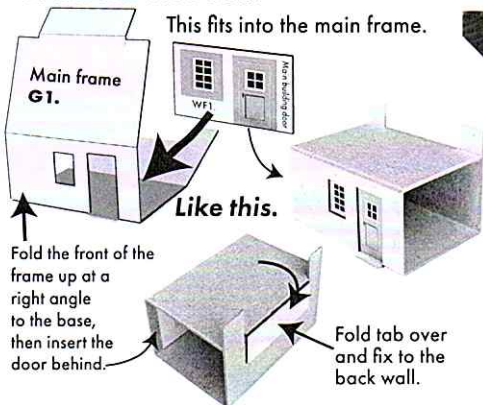


## Painting corners and edges.

This is best done before you build. Fold all corners fully back and paint with VERY much watered down paints to match.

## PLAIN GREY CARD Inner strengthening parts.


Dotted lines indicate score lines to cut to release from base card.

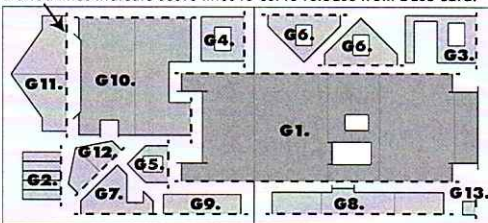

### Key to Grey Components.



- |                                |                               |                               |
|--------------------------------|-------------------------------|-------------------------------|
| <b>G1.</b> Main Frame.         | <b>G5.</b> Dormer spacer.     | <b>G9.</b> Gable 1st. floor.  |
| <b>G2.</b> Chimney inners x 5. | <b>G6.</b> WF1. Spacer x 2.   | <b>G10.</b> Main grey roof.   |
| <b>G3.</b> Gable door spacer.  | <b>G7.</b> End wall inner.    | <b>G11.</b> Gable grey roof.  |
| <b>G4.</b> WF1. Spacer.        | <b>G8.</b> Gable inner frame. | <b>G12.</b> Dormer grey roof. |
|                                |                               | <b>G13.</b> Chimney top.      |

## 2 Main Building Walls

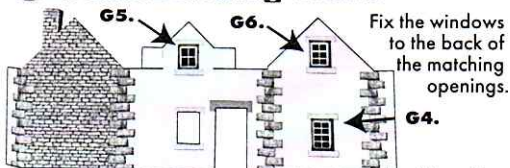


### The Chimney stack.

The 5 chimney spacers **G2** are glued one on top of the other to form a solid block.

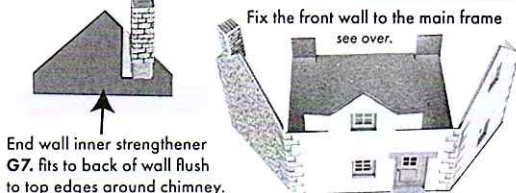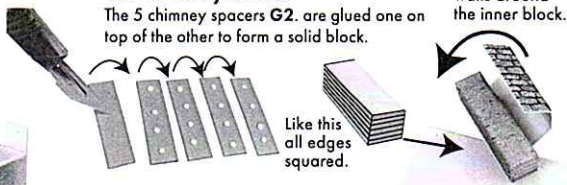



Fold walls around inner main frame.

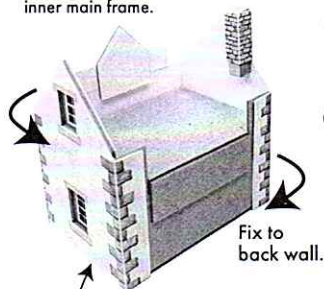

Keep **ALL** bottom edges flush to work surface (*very important!*).


### 3 Gable Building.

Fold the two side walls and the base at right angles

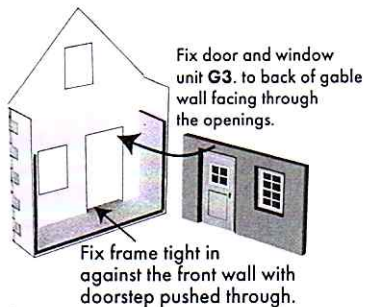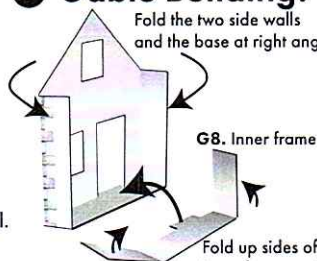

Fix window G6.

Fit 1st. floor G9. sitting on top of inner frame.

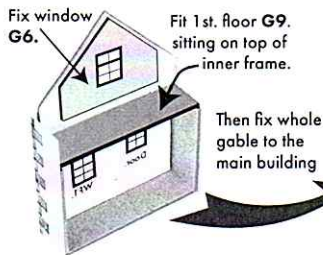


### 4 Roof.

Fix the grey roof G10. to the building folding in the dormer sides as you go.


Test without glue first.




The main printed roof fits directly on top of the grey roof.

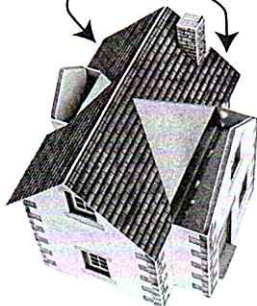

Fit the two grey roofs to the dormer and gable building.

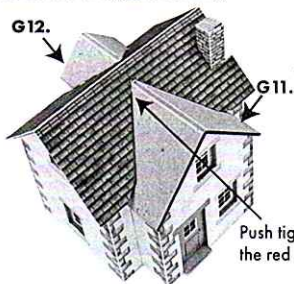

Fit dormer red roof tiles on top of grey roof.

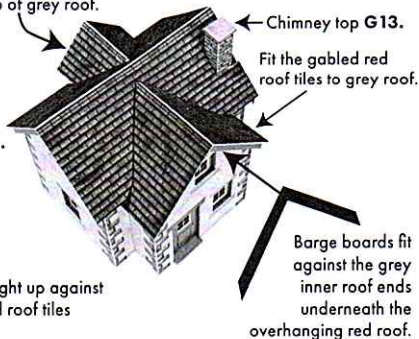

See the full range of METCALFE Card Construction Kits at

[www.metcalfe.com](http://www.metcalfe.com)

Where you can also download larger print and more detailed instructions for this kit. Plus Chimney Pots.