

RM107 00 Scale Lock-up Shop

INSTRUCTIONS


PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE YOU START

Start by extracting all the components from the printed and grey unprinted sheet. Each component is fastened to the sheet by means of score lines cut partway through the card. Carefully cut the scores with a knife to detach from base card.

Painting corners and edges.

This is best done before you build. Fold all corners fully back and paint with VERY much watered down paints to match.

PLAIN GREY CARD Inner strengthening parts. Dotted lines indicate score lines to cut to release from base card.

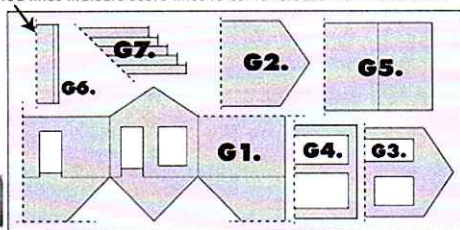


Key to Grey Components.

- G1. Inner Frame.
- G2. Rear Inner Gable.
- G3. Front inner gable.
- G4. Front fascia spacer.
- G5. Inner roof.
- G6. Signboard.
- G7. Flu vent inner.

1 Inner Frame.

Stand the inner frame G1. on a flat surface with the three base sections folded at right angles.

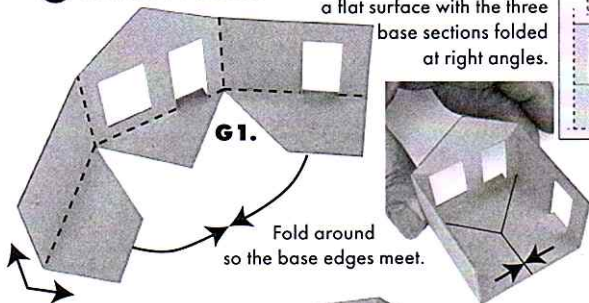


Fold around so the base edges meet.

Drop the floor inside with all edges flush to walls and door steps.

Fix holding everything square, make sure floor is pressed tight down everywhere.


Fold side walls and rear gable around the building and fix the side walls to the inner frame.

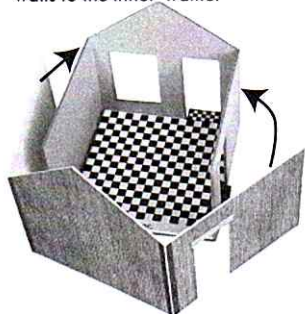

Fix rear inner gable sitting down onto floor so outer wall stands slightly taller.


2 Inner Walls & Doors

Fix glazing to back of door and window openings of inner front gable.

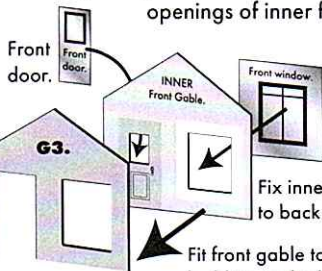

Fix inner front gable to back of G3. gable.


Fit front gable to inside of building pushed tight down to floor so window and door openings line up. Also wall tops should be flush.

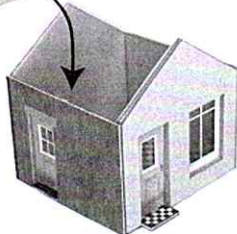

Fit side door into building as well.

3 Front Gable.


Fix **G4**. Front fascia spacer to the back of the gable fascia.

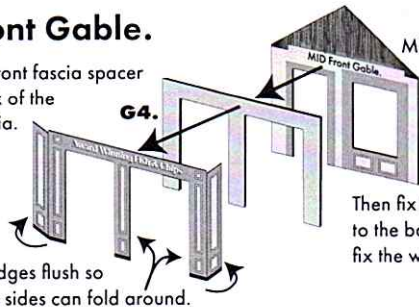

Inner edges flush so that the sides can fold around.

Mid gable wall.


Then fix the mid gable wall to the back of the G4. spacer and then fix the whole unit to the front of the building

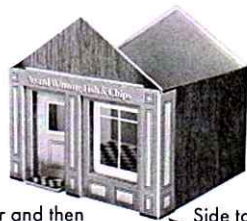

Side tabs folded onto the side walls.

4 Roof & Sign.


Inner roof **G5**. sits down inside the building on top of the inner walls.

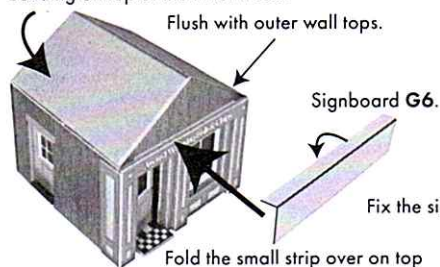

Flush with outer wall tops.

Signboard **G6**.

Fold the small strip over on top of signboard and glue back.

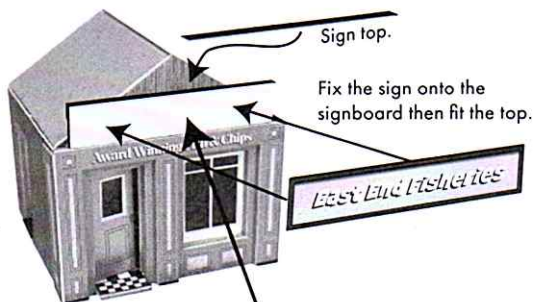


Sign top.

Fix the sign onto the signboard then fit the top.

Fix the signboard on top of the fascia DEAD CENTRE.

5 Flue Vent.

Fit the printed roof & ridge tile strip.

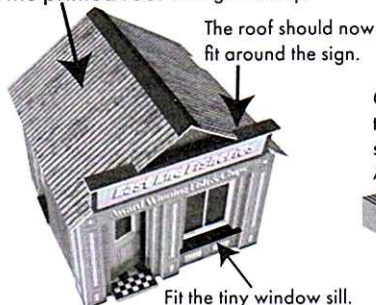


The roof should now fit around the sign.

Fit the tiny window sill.


Tiny spots of glue on the four lower spacers. Pick up top spacer with point of knife.



Glue the five **G7**. spacers together to form a solid block. All edges flush and square.

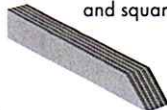

Wrap flue vent tightly around spacer block. Fit to gap in roof as shown. Top off with small square vent top.

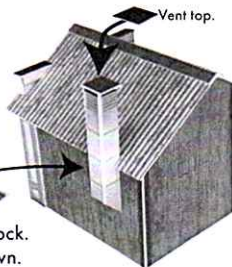

See the full range of METCALFE Card Construction Kits Glues & Tools at

www.metcalfe.com

You can also download larger print instructions and alternative signs for this kit.